

# How to add VW GOLF 6 NEC+24C32 key with OBDSTAR X300 DP



How to add key for VW GOLF 6 NEC+24C32 by using **OBDSTAR X300 DP/Key Master DP** via OBD.





## Procedure:

Connect Key Master DP with VCI and vehicle via OBD diagnostic socket  
Select Immobilizer function->VW/Audi/Skoda/Seat->VW->Program Keys->4th generation Immobilizer->NEC+24C32 ICM


**AUTOTOOLS.co.za**

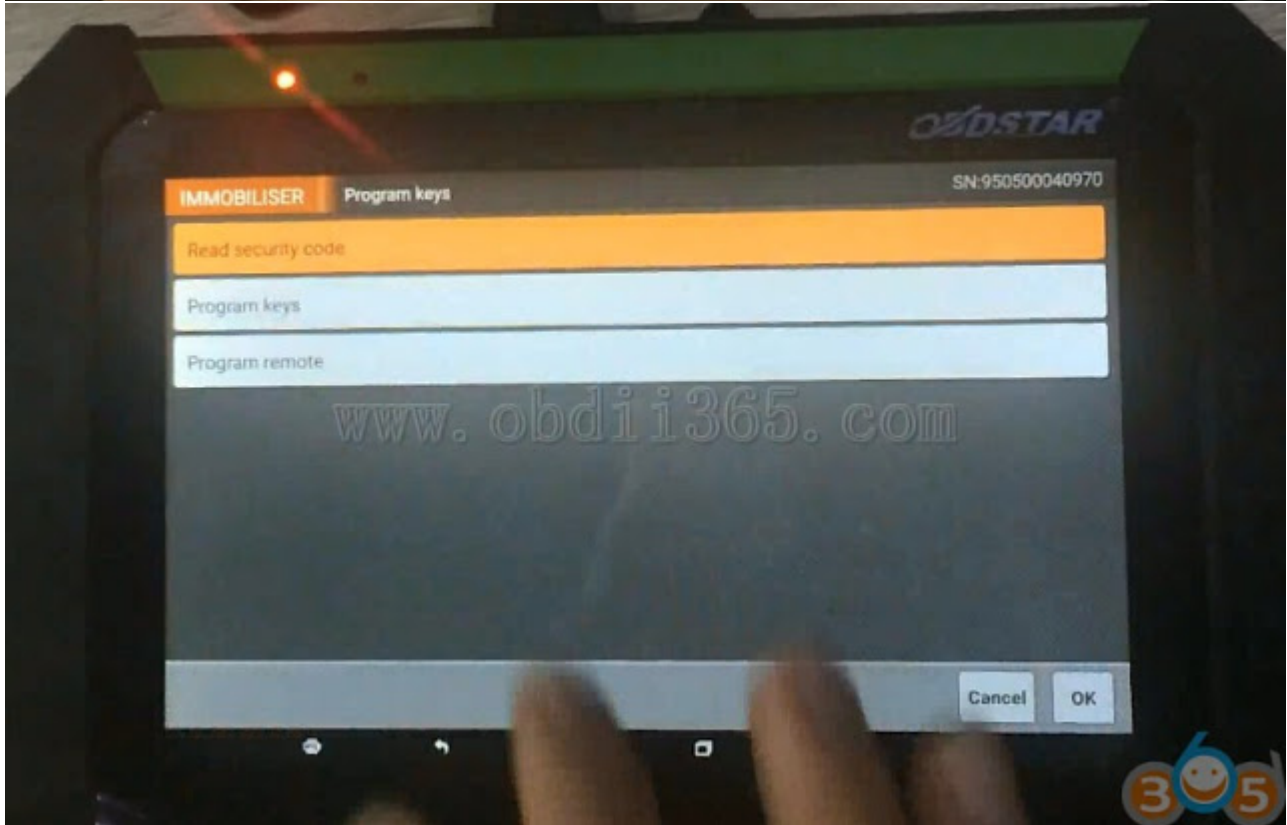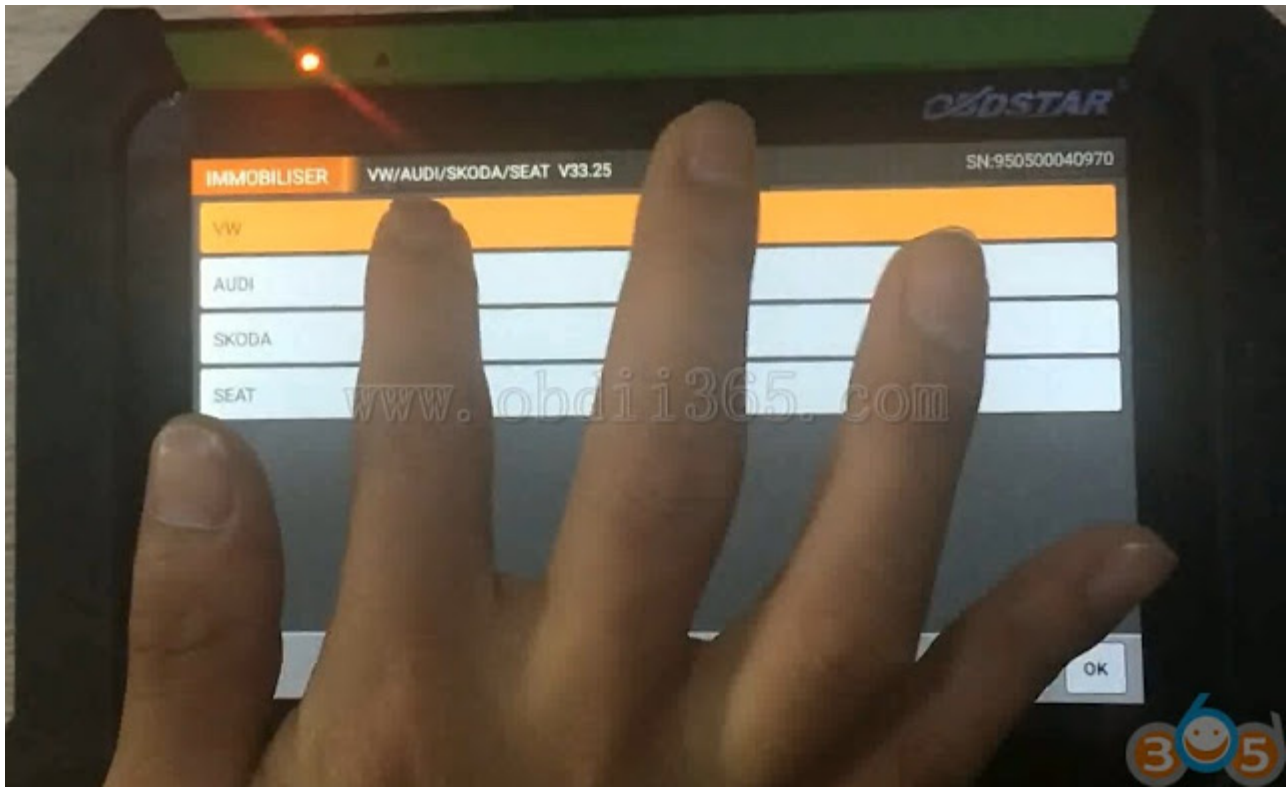

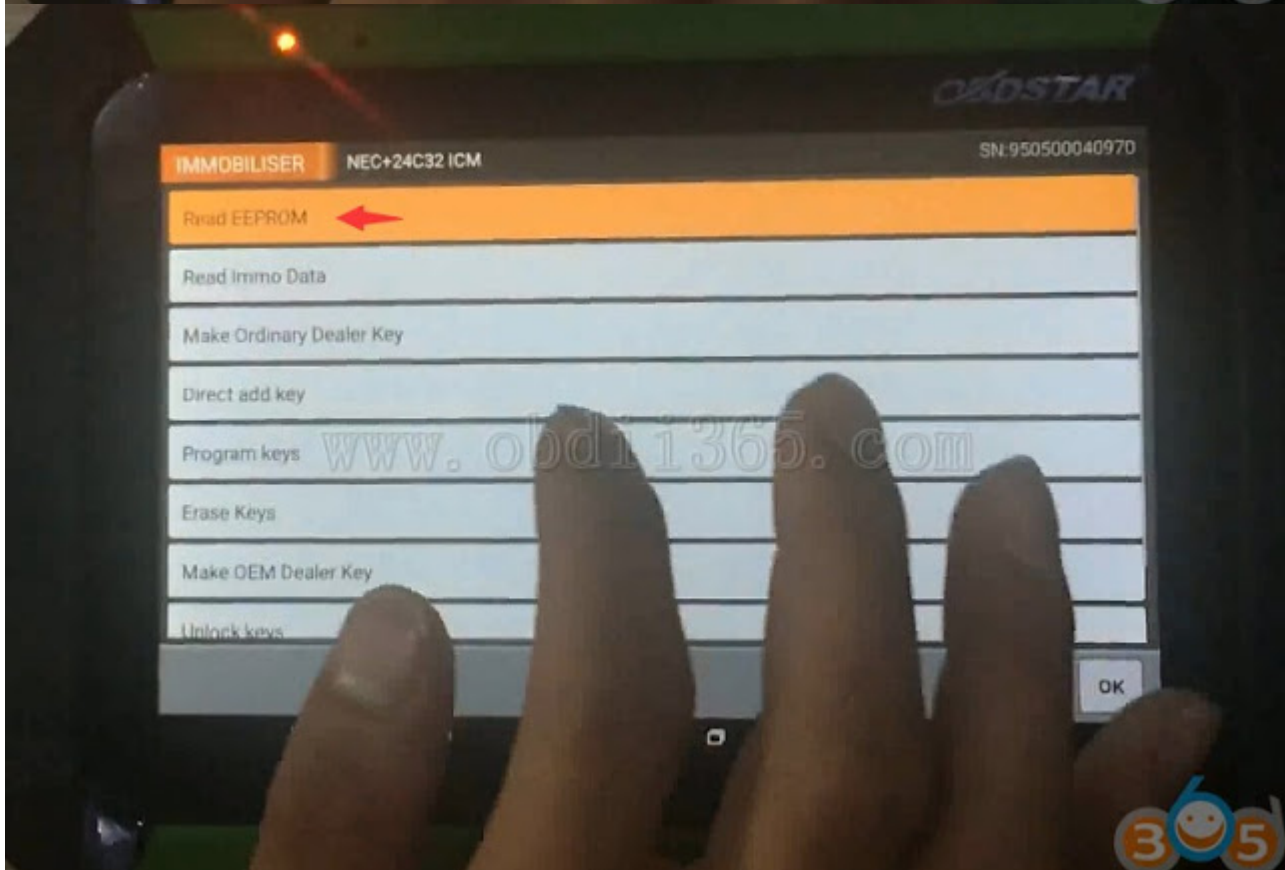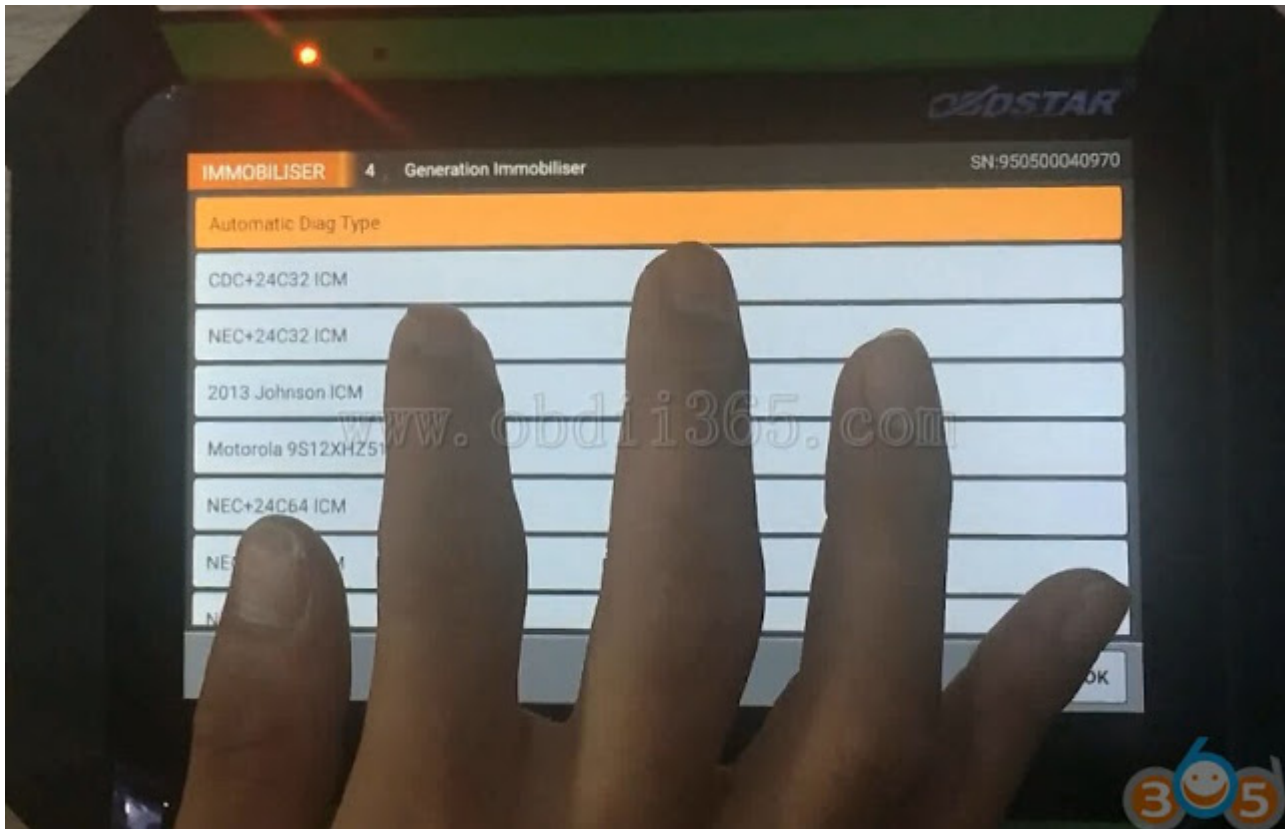


Read EEPROM data  
Turn ignition to ON position  
Reading data  
Immo indicator will flash during this procedure




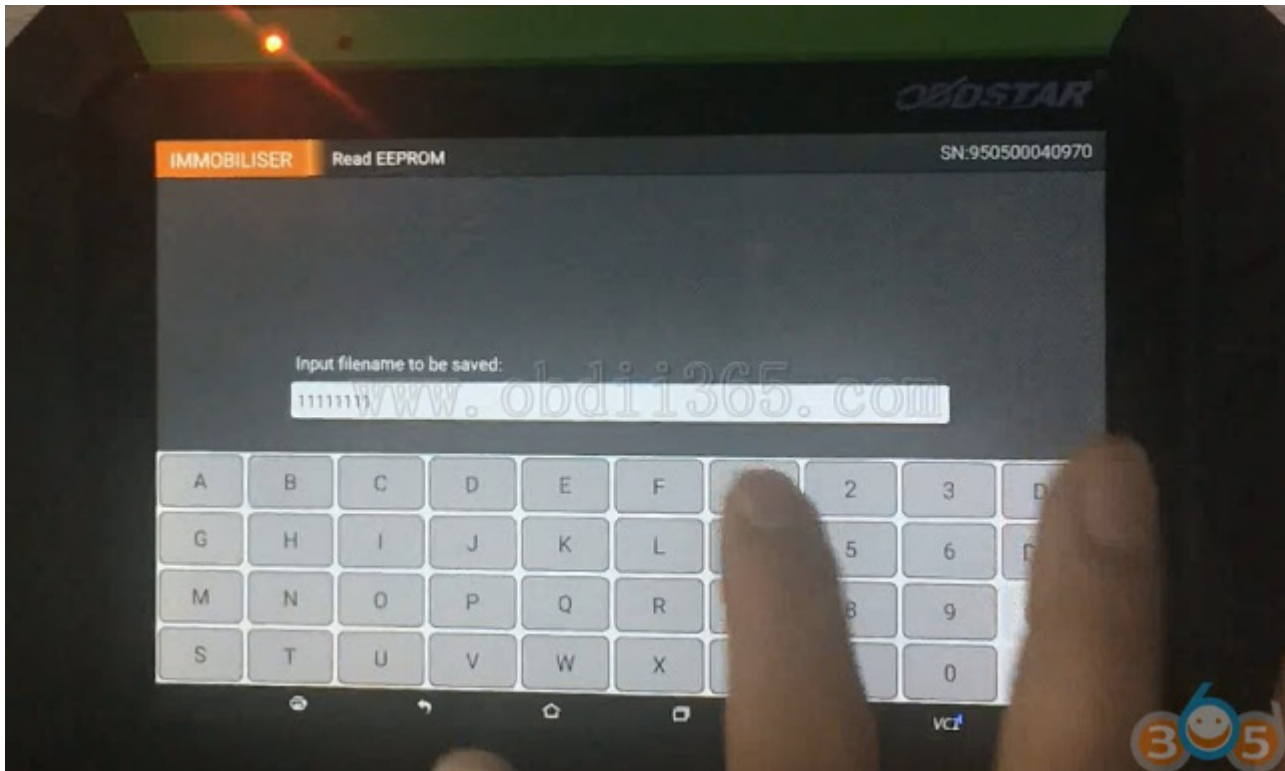

Save eeprom data

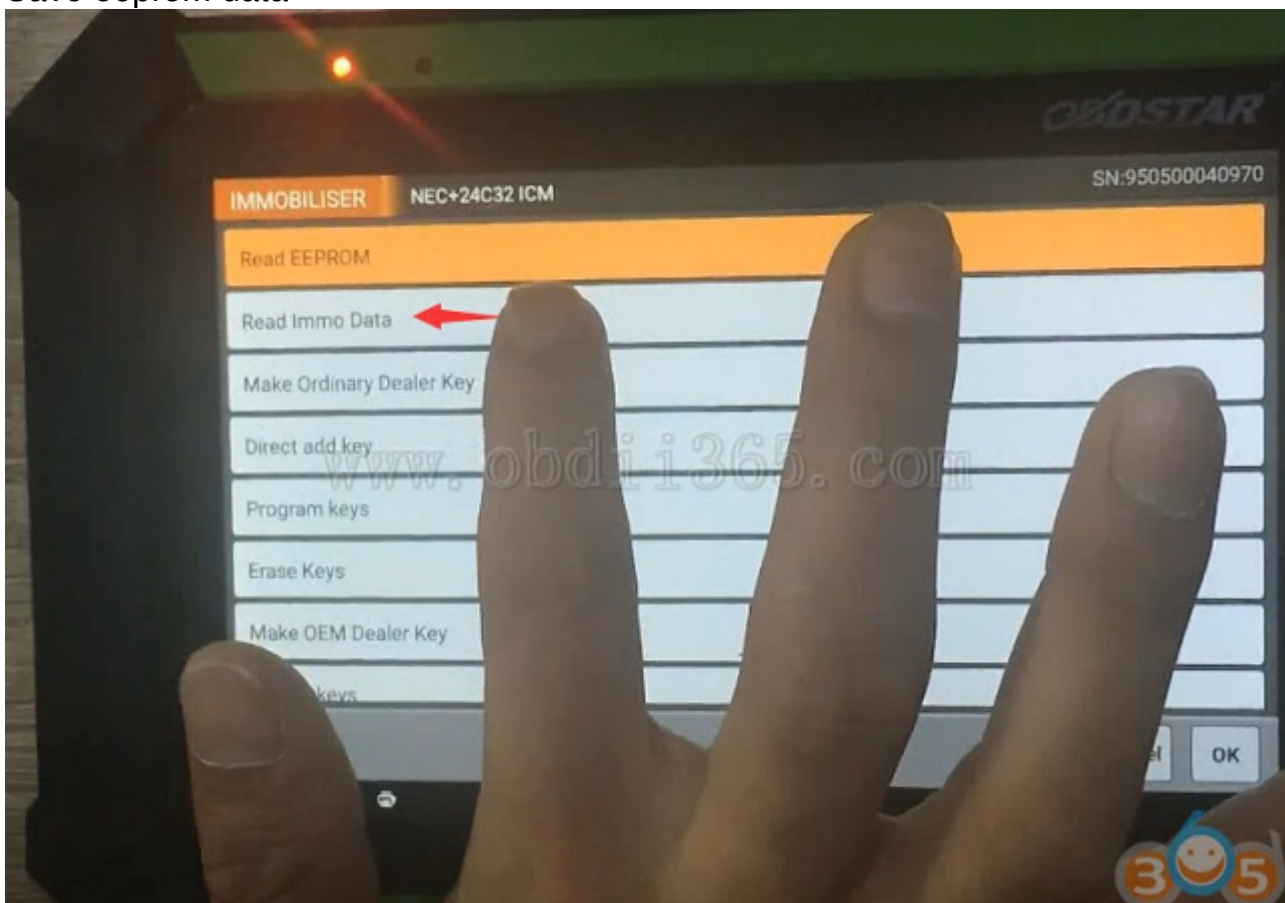

Read IMMO data  
 Switch ignition on  
 Reading data  
 Immo indicator will flash during this procedure

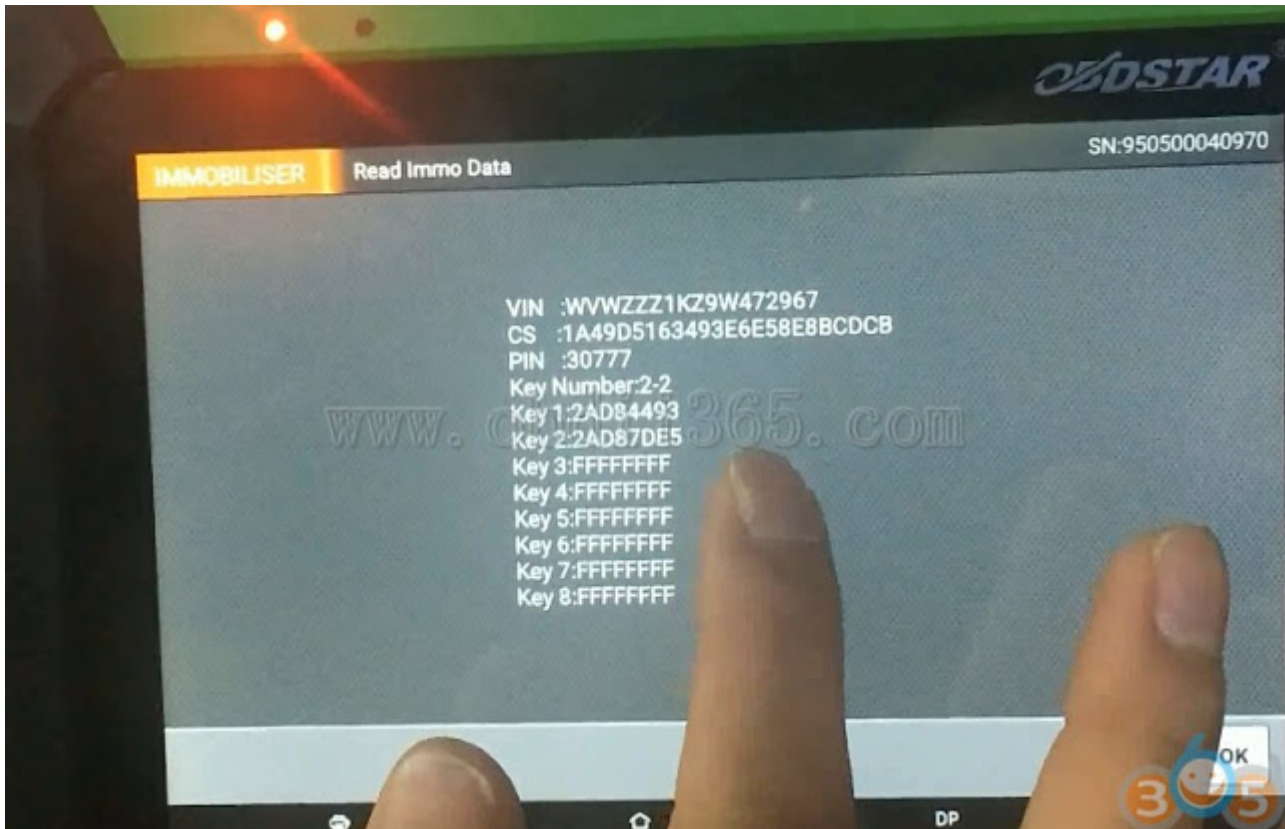


X300 DP read immo data success

Current number of keys: 2

Select Direct add key

Turn ignition on

You must read eeprom data before perform this operation

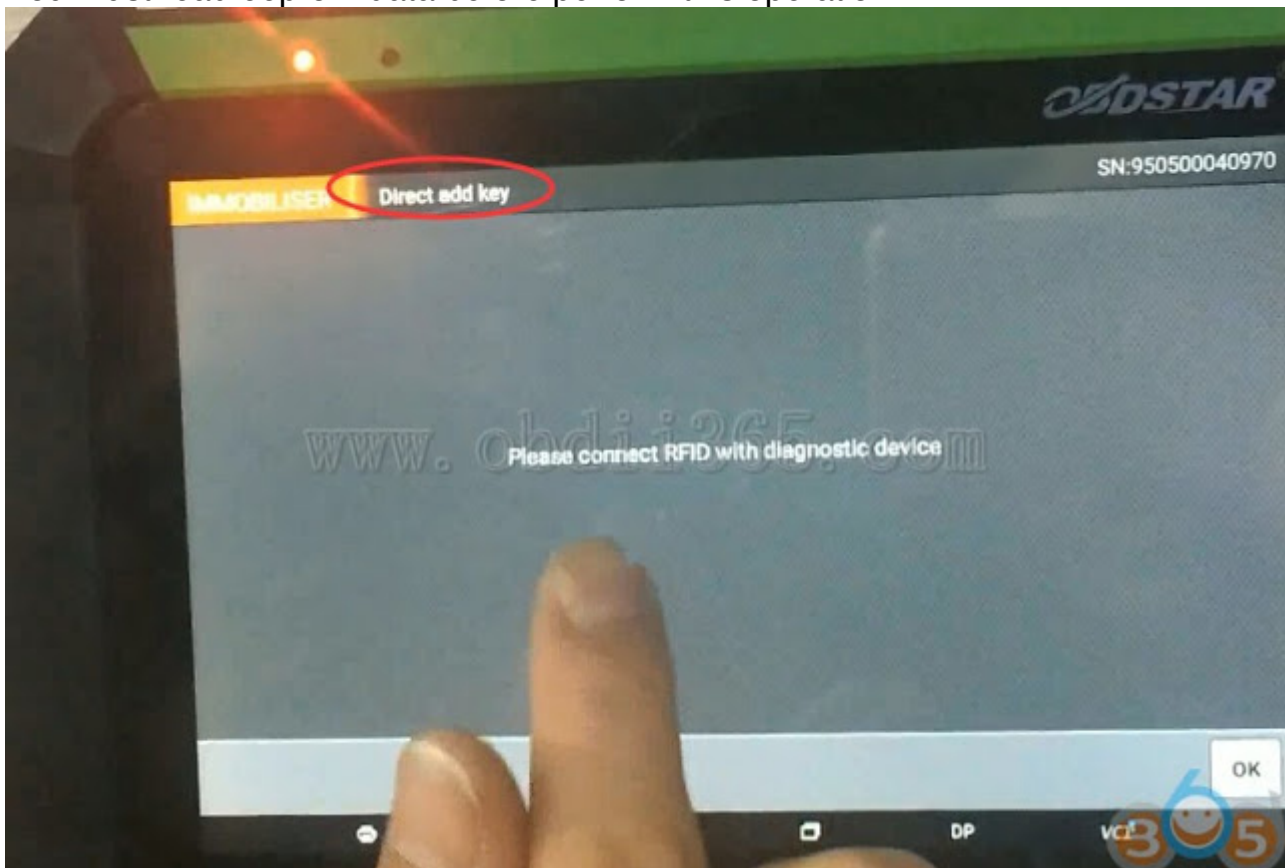




Connect OBDSTAR RFID adapter with key master dp

Reading data


Writing data

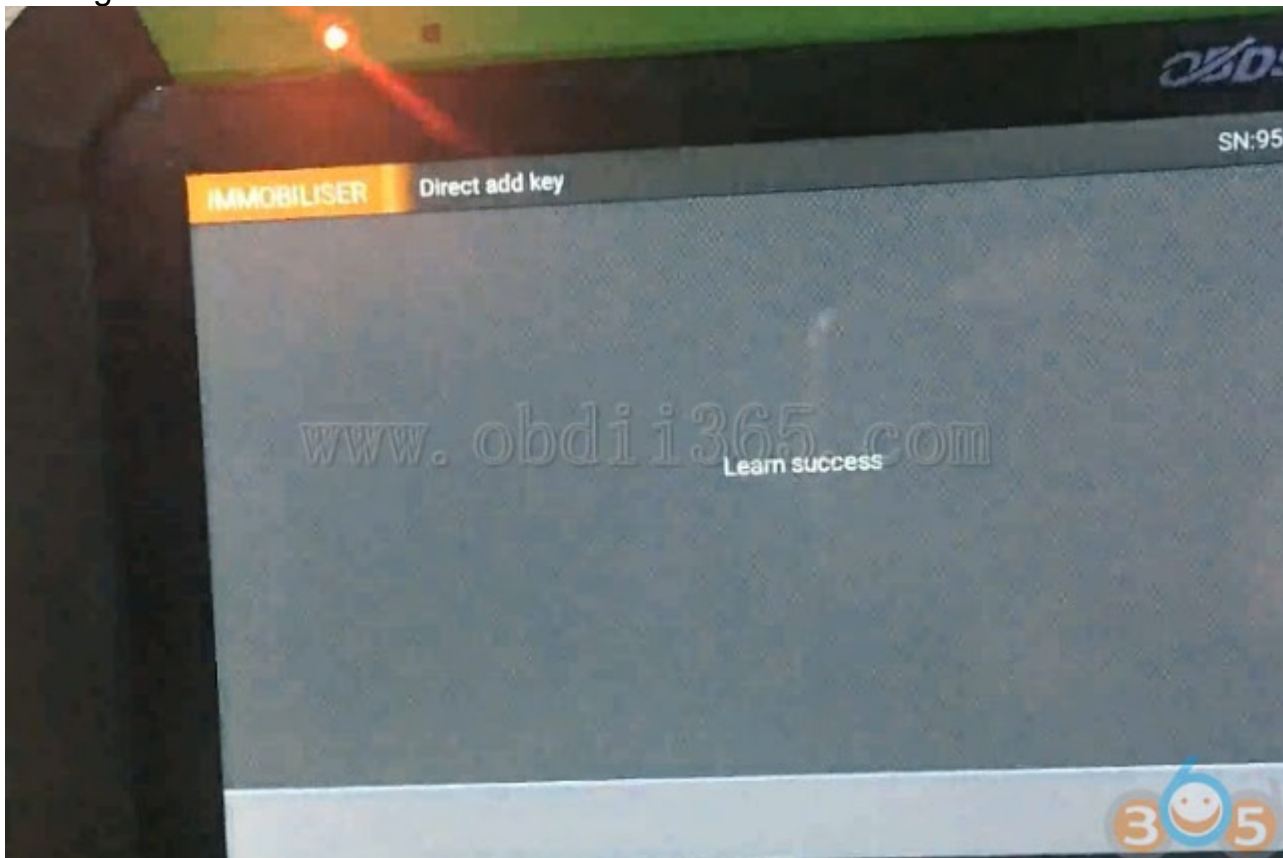

Key learning success.

Go back and read Immo data



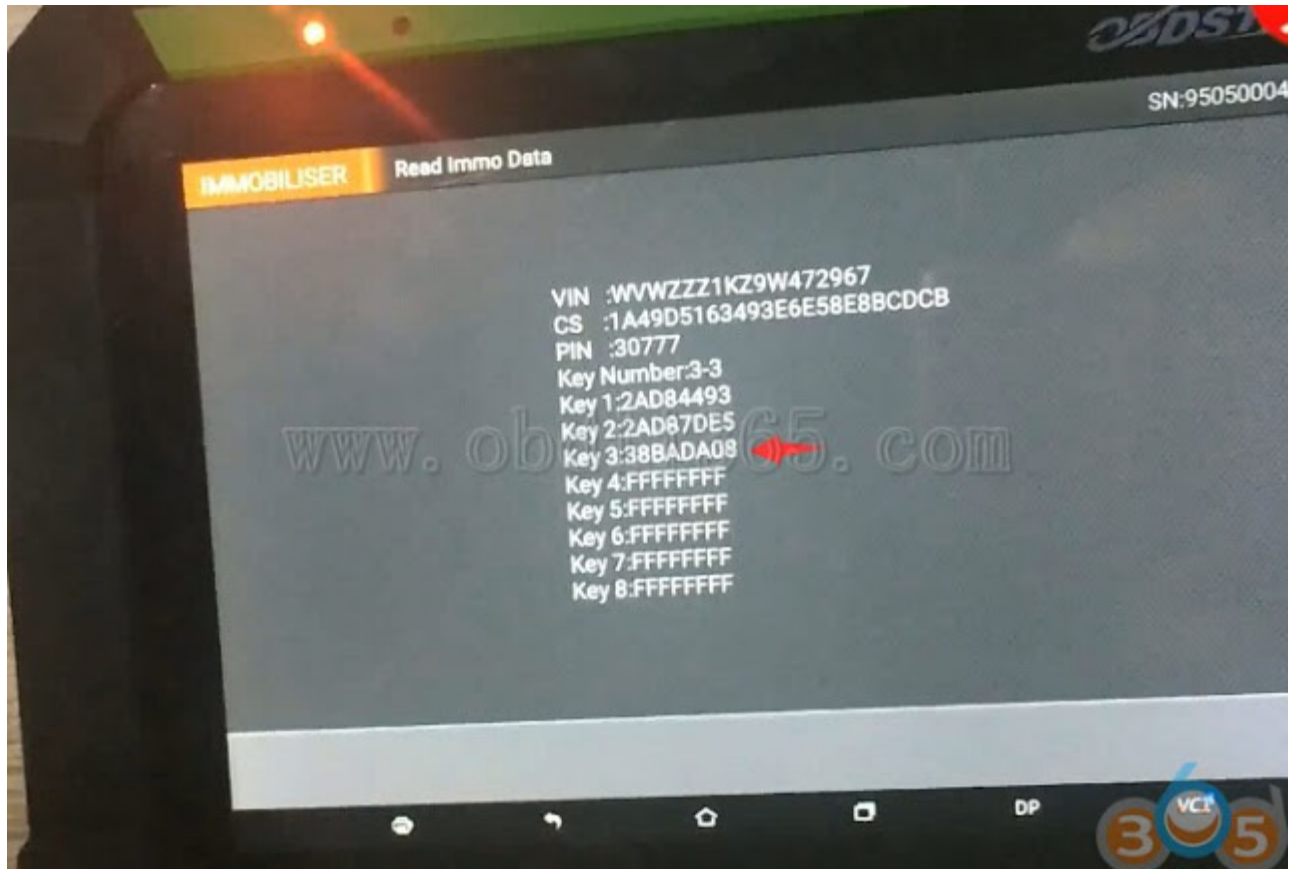

You can see the 3rd key has been successfully programmed.

Start vehicle with the new key.